

Description of the Controller

Standard functions:

Engine Control
 Generator Monitoring
 Generator Protection
 Engine Monitoring
 Clear Text Display

Suddenly Shutdown if :

Loss of Speed Signal
 Alternator Under / Over Voltage
 Alternator Under/ Over Frequency
 Mains Under / Over Voltage
 Mains Under/ Over Frequency
 Under / Over Speed
 Low Oil Pressure
 High Engine Temperature
 Phase Sequence Electrical (Option)
 Earth Fault (Option)

Will be Warned if :

Alternator Under / Over Voltage
 Alternator Under/ Over Frequency
 Mains Under / Over Voltage
 Mains Under/ Over Frequency
 Under / Over Speed
 Low Oil Pressure Pre-Alarm
 High Engine Temperature Pre-Alarm
 High/Low Battery Voltage
 Over-current
 Periodic maintenance

Note :

Due to keeping innovation,
 the specification and
 Machine pictures or color
 are subject to alteration
 without notice!